

SOUND ANCHOR STAND INSTRUCTIONS FOR B&W 801 / 802 NAUTILUS SPEAKER STANDS



Sound Anchor 801 / 802 Nautilus Stands do not fasten to the speakers. The speaker simply sits on top of the stand with four specially chosen points of contact. The two holes in the front cross bar locate and support the front of the speaker on the stand. The two industrial grade adjustable leveling pads support the rear of the speaker. These pads can be adjusted to level or tilt the speaker backward or forward.


PARTS INVENTORY

1. 2 ea. stand Weldments.
2. 4 ea. Leveling Pads
3. 8 ea. 3/8-16 x 1 1/4 spikes
4. 8 ea. 3/8-16 Hex Jam Nuts
5. 8 ea. 3/8 Flatwashers

ASSEMBLY

1. Insert the spikes into the threaded holes in the bottom of the stand (see figure 1).
Note: There are two options for spike placement.

The three point option will give slightly better performance in most cases but the 4 point option is available for those who desire more stability for their application.

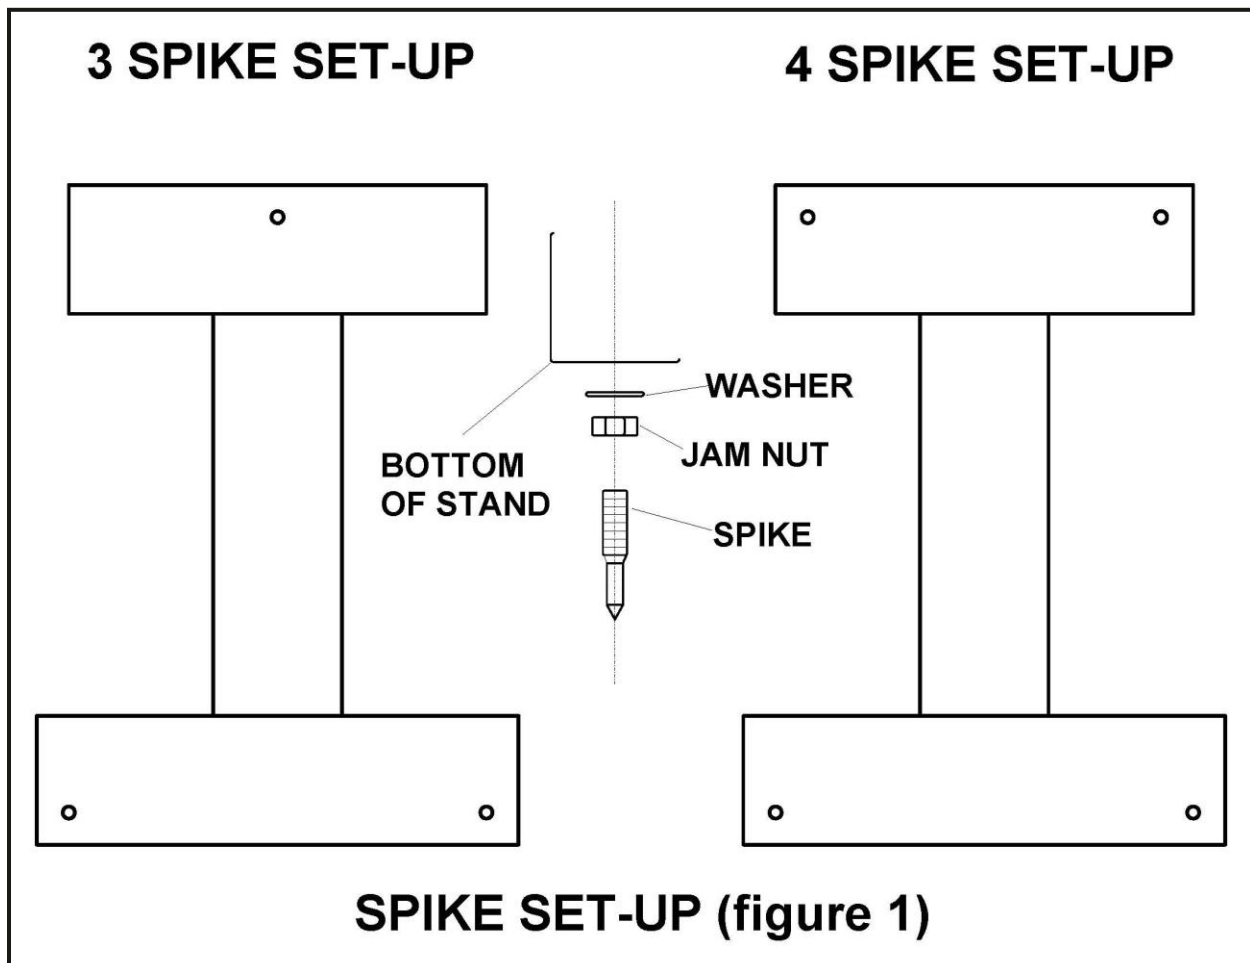


2. After installing the spikes place the stands where you will be setting up your speakers.
3. Level the stands and tighten the jam nuts. (see figure 2)
4. After the stands are placed and leveled, install the leveling pads with jam nuts into the threaded inserts on the top of the rear cross member of the stand.
5. Set the height of the pads so that they are level with the top surface of the front cross bar on the stands (do not tighten the jam nuts).

SPEAKER MOUNTING

CAUTION: THIS SPEAKER IS HEAVY AND IT WILL REQUIRE 2 STRONG PEOPLE TO LIFT IT.

1. Lift the speaker and place it on top of the stand so that the front ball casters on the speakers (or spikes) fit into the holes that are drilled in the front cross bar of the stand.
2. Adjust the leveling pads for the desired level or tilt and tighten the jam nuts.

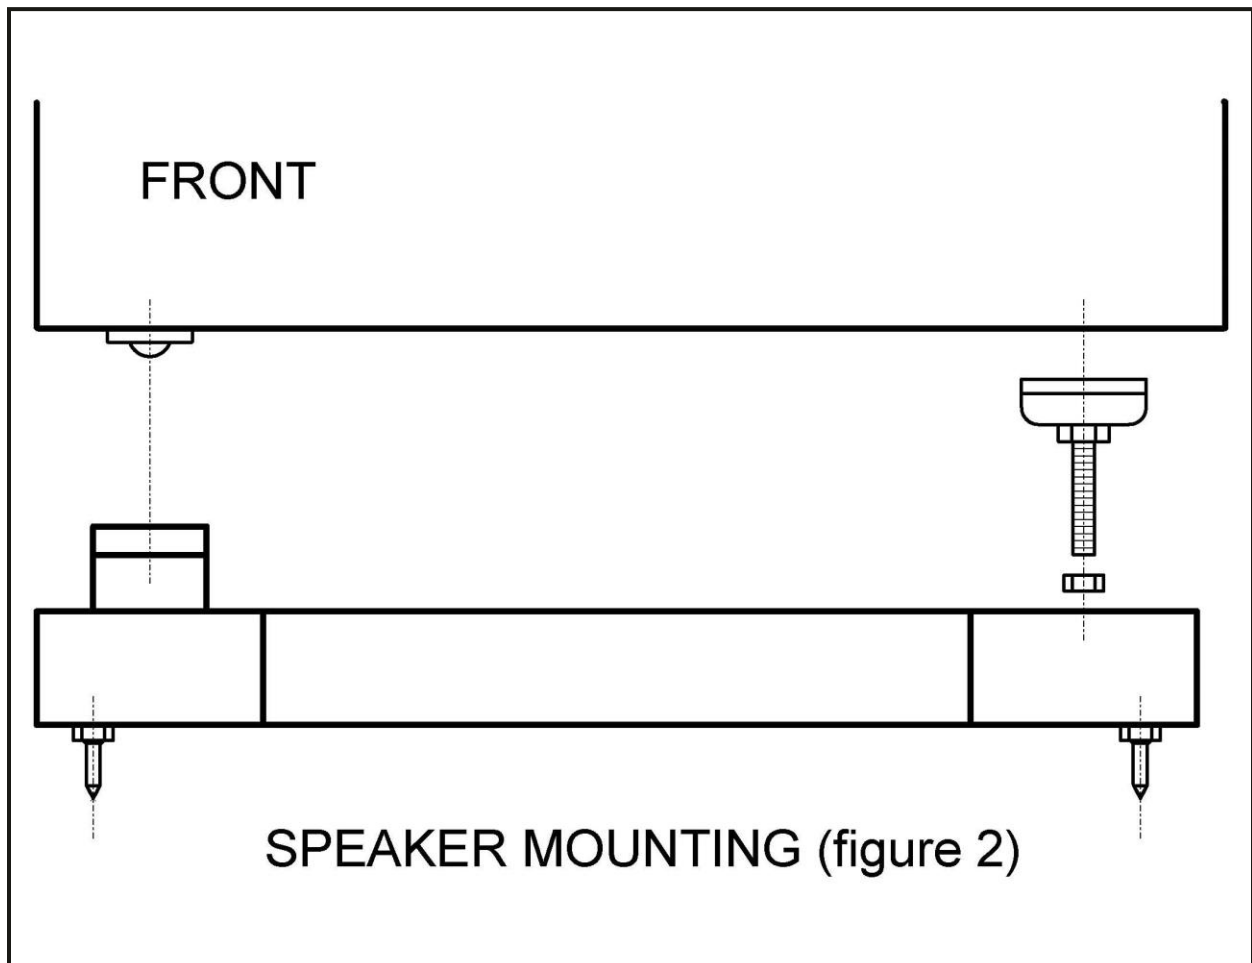

SIT BACK AND ENJOY THE MUSIC